



Kronen Coconut Cracker KN 100
Opening coconuts fast and easy



Just place the coconut in the machine...



Move lever up and down for 30 seconds...



Release the container and remove the skin...



Done!

Coconut cracker

Cracking coconuts?

Forget the hammer and chisel.

Because now it takes only seconds with the KRONEN coconut cracker KN-100.

The skin is cleanly removed from the flesh. needed: 30 – 60 seconds.

Order-No. 45200



Supplying all your fresh convenience food needs for fruits, vegetables, juice, sandwiches and pizza

More information is available from:

KRONEN KÜCHENGERÄTE GmbH

Gewerbestraße 3 · D-77731 Willstätt · phone +49 (0) 78 54/96 60-0 · fax +49 (0) 78 54/96 60-50
www.saftsack.com · www.kronen-germany.de · info@kronen-germany.de